

Triswivel

Diagram	Description	Part #
1	Handle Bar - no score card holder	BBP13100
2	Scorecard holder	BBP21250
3	Upper Frame assembly with brackets and brake cable	BBP11400
	Upper bag Bracket Rubber Insert	BBP46032
4	Umbrella Holder	BBP17702
5	Brake cable	BBP60300
8	Wheel strut 2 hole (LFT or Rght side)	BBP08202
9	Wheel Knuckle - Right	BBP17200
10	Accessory Bag	BBP15300
11	Rear Wheel	BBP39600
14	Drag Link Flat (LFT or RHT) Pair	BBP31200
15	Front wheel Frame (no fork or wheel)	BBP13200
16	Fork (no wheel)	BBP58200
17	Front Wheel	BBP58300
18	Drag Link - Lower lft or right	BBP32600
19	Support Cable	BBP33100
20	Wheel strut 3 hole(LFT or Rght side)	BBP08200
21	Wheel Knuckle - Left	BBP17201
	Scorecard holder lid only	BBP21218
	Lower bag Strap	BBP46050
	Bag Bracket Wing RT	BBP14393
	Bag Bracket Wing LT	BBP14394
	Wing rubber insert - Silver	BBP46032
	Wing rubber insert - Blue	BBP46033
	Wing rubber insert - Red	BBP46034