

Navigator Elite

Diagram	Description	Part #
1	4th wheel	BBP52313
2	Battery Tray	BBP52215
3	Front Wheel Assembly	BBP52311
4	Gearbox+axle	BBP52910
5	Gear Box HD - heavy duty	BBP52915
6	Lower Bag Support Straps	BBP52508
7	Lower Handle	
8	Motor Controller	BBP52830
9	Motor Controller Connector O rings -SMALL	BBP52836
10	Motor Controller Connector O rings -LARGE 15mm	BBP52832
11	Motor RH	BBP52909
12	Motor LH	BBP52911
13	Motor RH HD -Blue sticker	BBP52913
14	Motor LH HD - Blue sticker	BBP52914
15	Rear Wheel	BBP52312
16	Sand/Seed Holder	BBP52214
17	Seat	BBP52211
18	Seat Bracket Horizontal Tube	BBP52212
19	Top Box	BBP52829
20	Top Box Speed Controler	BBP52912
21	Umbrella Holder	BB17701
22	Upper Bag Support	
23	Upper Bag Support Straps	BBP52509
24	Upper Handle	BBP52137
25	Wishbone Assembly	BBP52138
26	Battery	BBP52834
27	Battery Charger	BBP52835
28	Stem Cable	BBP52833
29	Remote case and Keypad	BBP52216
30	Remote	BBP52802
31	Remote battery	BBP52831